



**WALDNER**  
GETREIDEMÜHLEN

MILL

# LADY

USER GUIDE & CERTIFICATE  
OF WARRANTY

 
## GETREIDEMÜHLEN WALDNER BIOTECH GMBH

Kärntnerstraße 62, A-9900 Lienz/Osttirol  
+43 (0)4852 70 200, office@waldner-biotech.at

[www.waldner-biotech.at](http://www.waldner-biotech.at)

design: aberjung.com

photos: ramonawaldner.com

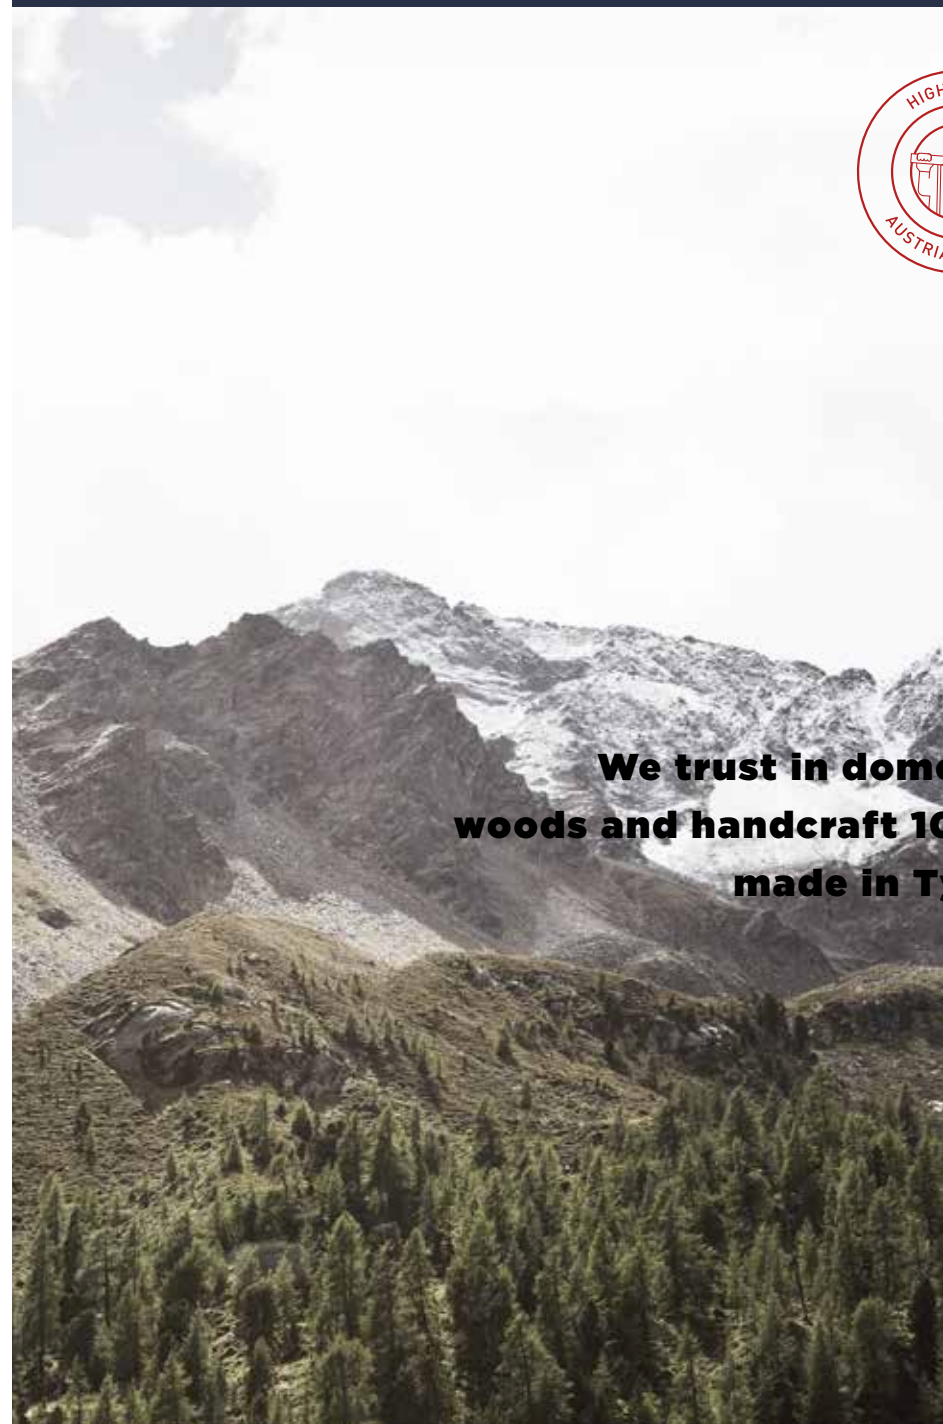

**We trust in domestic  
woods and handcraft 100 %  
made in Tyrol.**



## SAFETY INSTRUCTIONS

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.



**ATTENTION:** Misuse can cause injuries.



**SAFETY:** Never immerse the device into water. Only authorized customer service is allowed to perform repairs using original parts and spare parts. If the power cable of this device is damaged, it must be replaced by the manufacturer or its Customer service or a similarly qualified person in order to avoid any danger.

## GRAIN MILL LADY TECHNICAL DATA



Type of wood

Stone pine



Grinding output fine

120 g/min.



Diameter millstone

90 mm



Millstone

white corundum and ceramic



Grinding chamber

self-cleaning



Hopper capacity

1.000 g



Dimensions H/D

32/18 cm



Weight

7,5 kg



Voltage/Hertz/Watt

220 -240/50/400

Overload protection with thermal sensors  
child protection



## COMPONENTS



- |                                               |                                          |
|-----------------------------------------------|------------------------------------------|
| 1. Cover hopper                               | 6. Locking screw                         |
| 2. Hopper                                     | 7. Safety push-button/mill (not visible) |
| 3. Safety loop (not visible)                  | 8. Direction arrow                       |
| 4. Upper and lower millstone<br>(not visible) | 9. Output flour                          |
| 5. Coarseness scale                           | 10. Power switch mill ON/OFF             |
|                                               | 11. Power supply (not visible)           |



### GRAINS

Spelt, wheat, millet, rye,  
corn, rice, chickpea, etc.

**COARSENESS SETTING FINE TO ROUGH**



### GRAINS AND SEEDS

Oat, flax seed, soya bean,  
wild beans, etc.

**COARSENESS SETTING MEDIUM-FINE TO ROUGH**



### SPICES AND SALTS

Fennel, kummel, cilantro, sea salt, etc.

Tip: add to grains

**COARSENESS SETTING FINE TO ROUGH**

# LIVING TRADITIONS

MILL LADY

MILL LADY





## INITIAL OPERATION, SETTING OF GRINDER

### INITIAL OPERATION

 
1. Place mill on a ground surface. **Attention:** Never place the mill on a hot surface (eg stovetop)
2. Check if supply voltage corresponds to the required voltage for the device
3. Plug power plug into socket.
4. Press power switch to ON.

### SETTING OF GRINDER


Coarseness can be regulated continuously. Just turn hopper and adjust the distance of the 2 millstones according to the desired coarseness. A locking screw on the side assures the setting and prevents from loosening.




**NOTE:** Efficiency & result of the grinding depend on the quality of the mill material. The drier the mill material, the higher the efficiency.

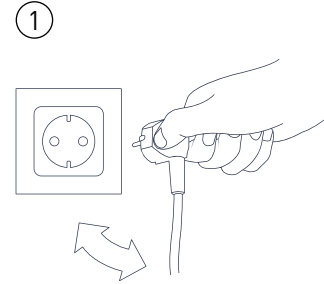

 
1. Plug power plug  
into socket

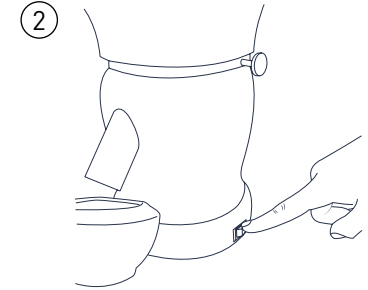

 
2. Press power switch  
to ON

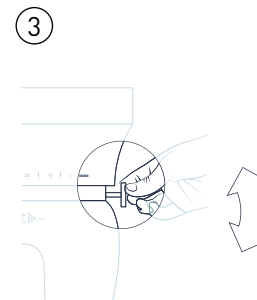

 
3. Release locking  
screw in order to  
turn hopper

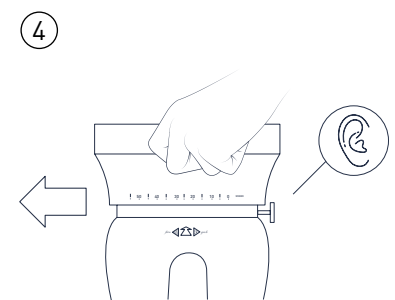

 4. Turn hopper in the  
direction of >MIKRO<  
until you hear a slight  
grinding sound.

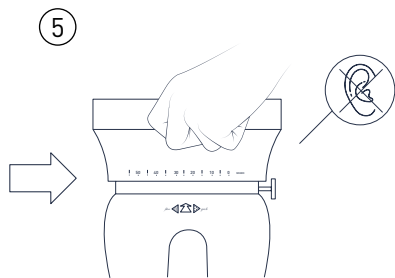


 5. Twist back hopper until the grinding sound disappears - this is the finest coarseness setting.

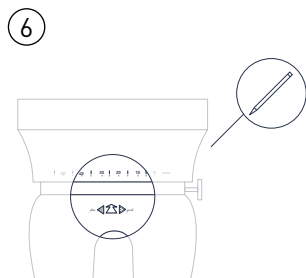

6. Mark this coarseness setting on your mill. All further settings can be customized (from fine to rough).

 7

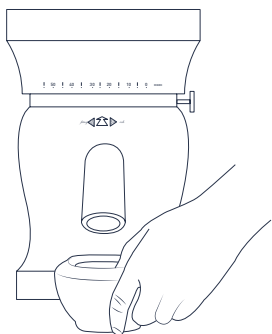

7. Put a bowl under flour output prior to every use of the device.

8



8. Have fun grinding!

## TROUBLE SHOOTING



The device can't be switched ON

### REASON

Hopper is not completely closed (safety button has no contact)

### HELP

turn hopper in the direction fine >fein<



The grinder is smudged

### REASON

The mill material was too damp for the desired coarseness or seeds were ground too fine without adding dry mill material.

### HELP

remove smudge from millstones using a wire brush and afterwards grind rice or corn roughly. (grinder setting rough >grob<).



The flour output is blocked.

### REASON

The mill material used was too damp for the desired coarseness.

### HELP

Clean hopper and output (see also chapter CLEANING). Dry the mill material.



Device stops during grinding process.

### REASON

Overheating of the motor

### HELP

The device has a overload protection with thermal sensors and turns on again automatically.

# PASSION FOR DETAIL







## CLEANING OF MILL



Clean housing with a soft, damp towel.



Clean grinding chamber with a brush or aspirator.



Clean the millstones by grinding roughly rice or corn or by using a brush.



Never use sharp items or chemicals for the cleaning of the housing.



 
Open the mill: The device can be opened easily by removing the hopper. When closing make sure the hopper is in place properly.



The device has a safety button. When removing the hopper the motor stops automatically - children protection.



The device is free of service and maintenance. However, keep original packing for possible transport.

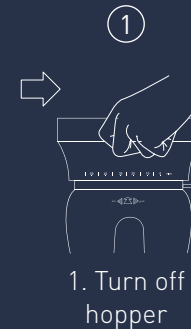



## WARRANTY INFORMATION

### 1. Terms

The warranty of this device is 8 years from date of purchase (proof of purchase). Any warranty service work will not have an impact on the term. The warranty for spare parts remains intact.

### 2. Coverage

Within said term all defects in materials or workmanship of the device will be covered. Replaced parts remain our property. The customer will be charged for transport of the device. Transport is at customer's risk. Any damages during the transport have to be reported immediately to the carrier. Any further claims are excluded, in particular claims for recession, reduction in price or damages.

**Excluded from this warranty are:** Regular wear and tear (eg millstones), misuse (eg device not used properly), scarce care and cleaning, nonobservance of the user guide, damages during transport and droppage, also excluded are damages due to non corresponding power supply and also damages caused by unauthorized third parties.

### 3. Area of validity

Warranty services will be covered in the country of purchase. The warranty is solely valid if the device was purchased by our defined chain of distribution. For devices which were purchased in one European Union country and delivered to another European Union country the warranty services are subject to the country's specific warranty conditions. There will be an obligation for warranty services just in case the device meets the technical requirements of the country in which the warranty service will be executed.

## WARRANTY

Waldner biotech GmbH grants a warranty of **8 years** from date of purchase (proof of purchase) for your device according to following conditions:



**Type:**  
**LADY - Grain mill**

Waldner biotech GmbH guarantees that this device fulfills within the term of the warranty the purpose of use according to compliance with the user guide and to proper care and cleaning. The customer agrees to check immediately after purchase the conditions and functionality of the device and to report possible defects immediately to vendor. Only authorized customer service is allowed to render all type of services. Proof of purchase is always required for any desired service.